3. Disassembly and Reassembly

3-1 Disassembly

3-1-1 Back Cover Removal

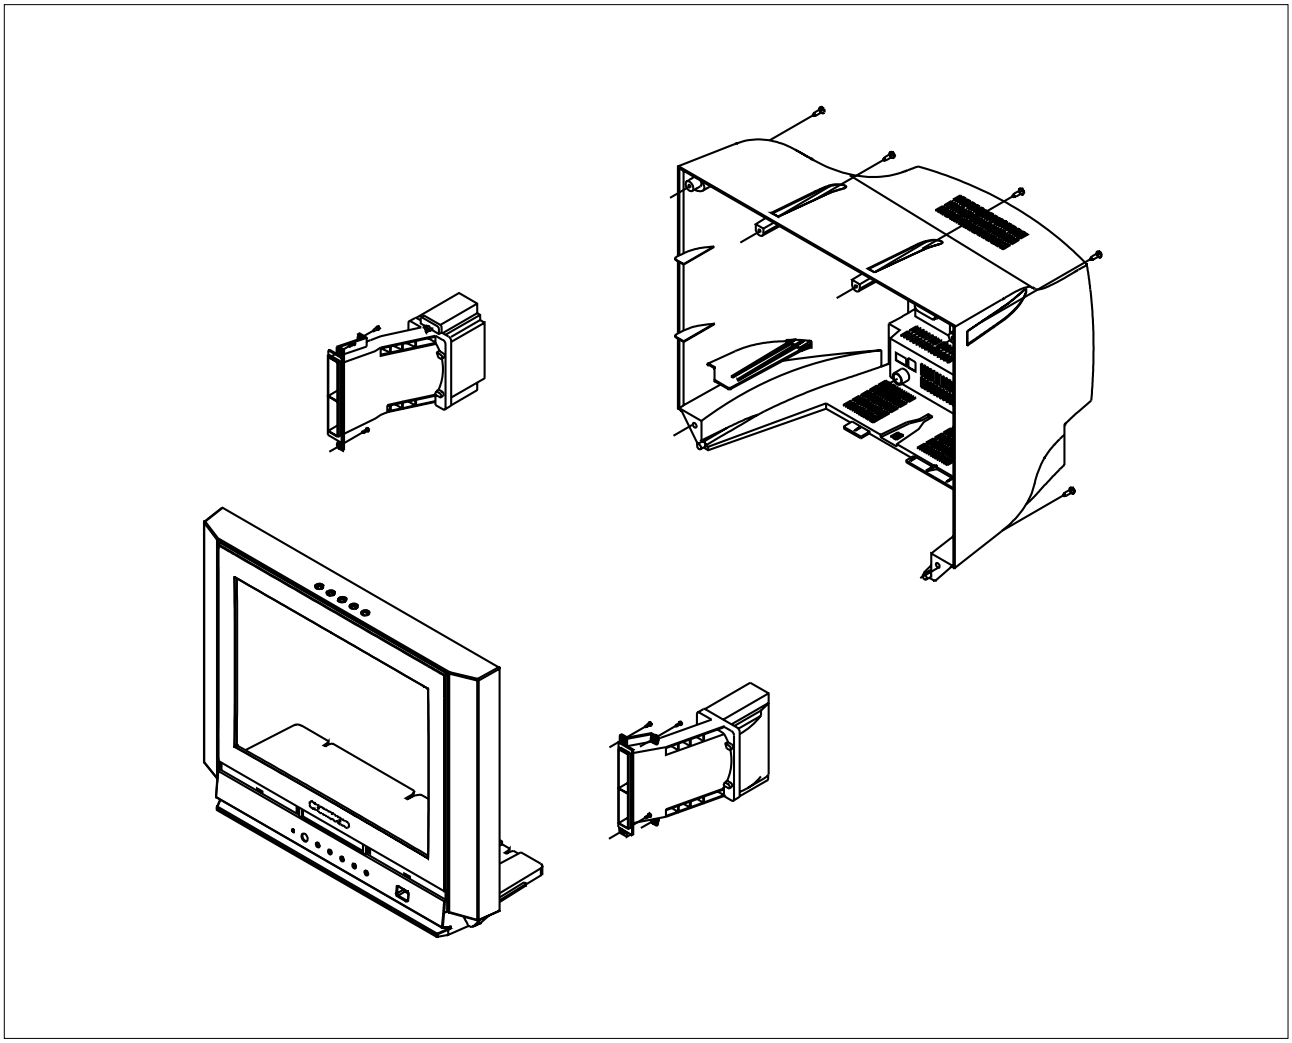

1. Remove the screws located on the side of the back cover.

3-1-2 Main Assembly Removal

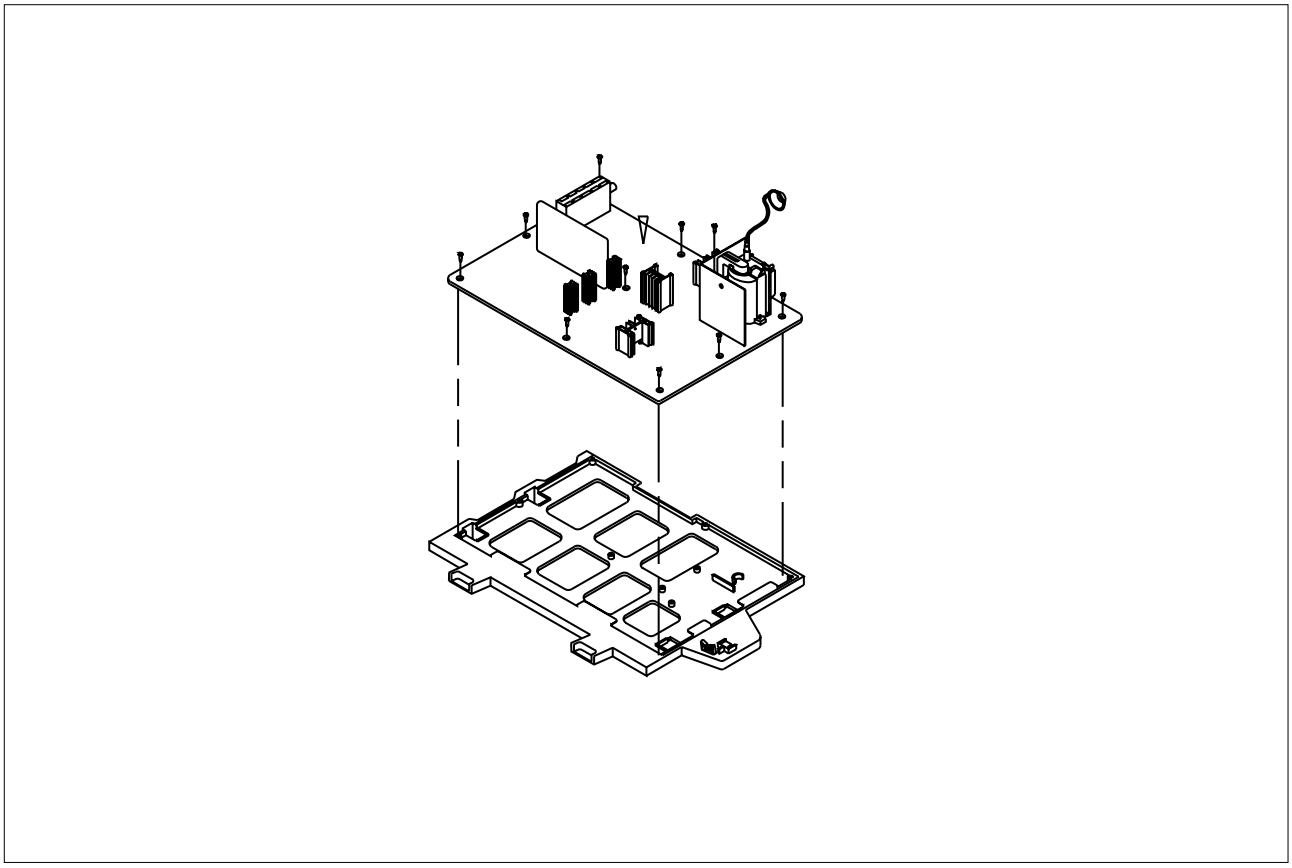

1. Release two connectors between sub PCB and Main Assembly.
2. Pull the Main Assembly backwards to remove.

3-1-3 Frame Removal

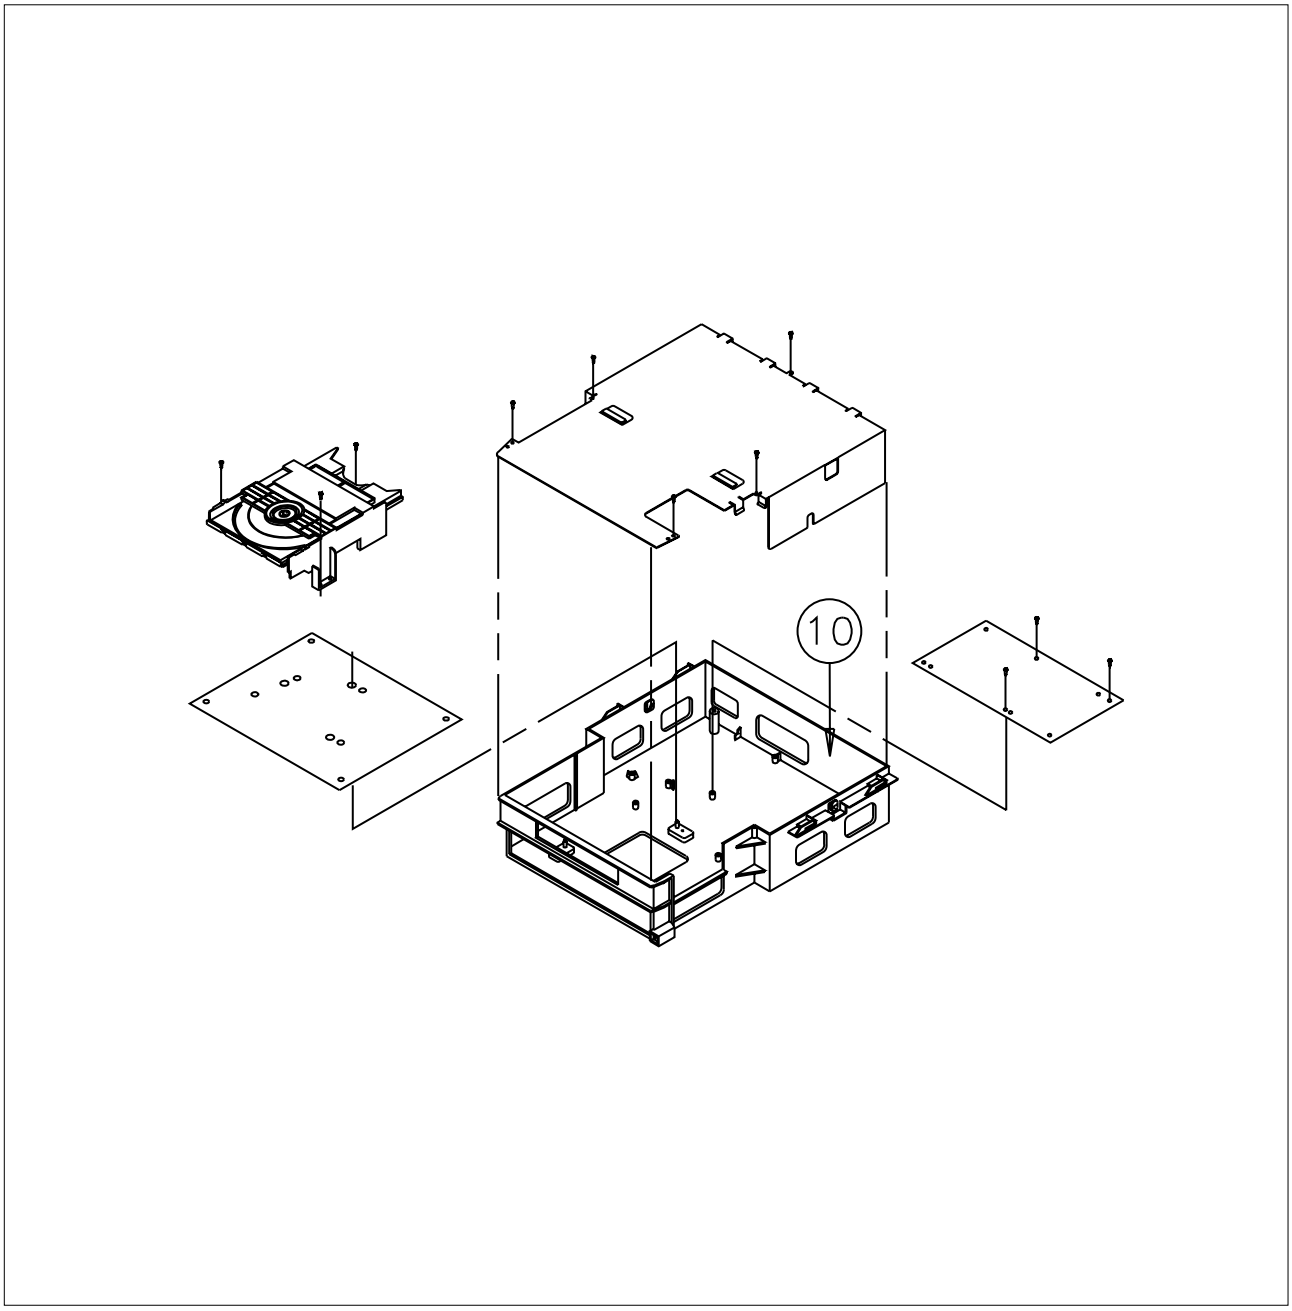

1. Remove 3 screws from the Main Assembly. Remove the dust cover.
2. Remove 4 screws from the Deck Assembly.

3-2 Deck

3-2-1 Tray Disc Removal

1) Insert a Screw Driver ❶ into Emergency Hole ❷ and push the Slider Housing ❸ in the direction arrow “A”.
2) When the Tray Disc ❹ comes out a little, pull it in the direction arrow “B” by hand.
3) Pull the Tray Disc ❹ to disassemble , while simultaneously pushing 2 Stoppers ❺ (left, right) in the direction arrow “C”, “D”.

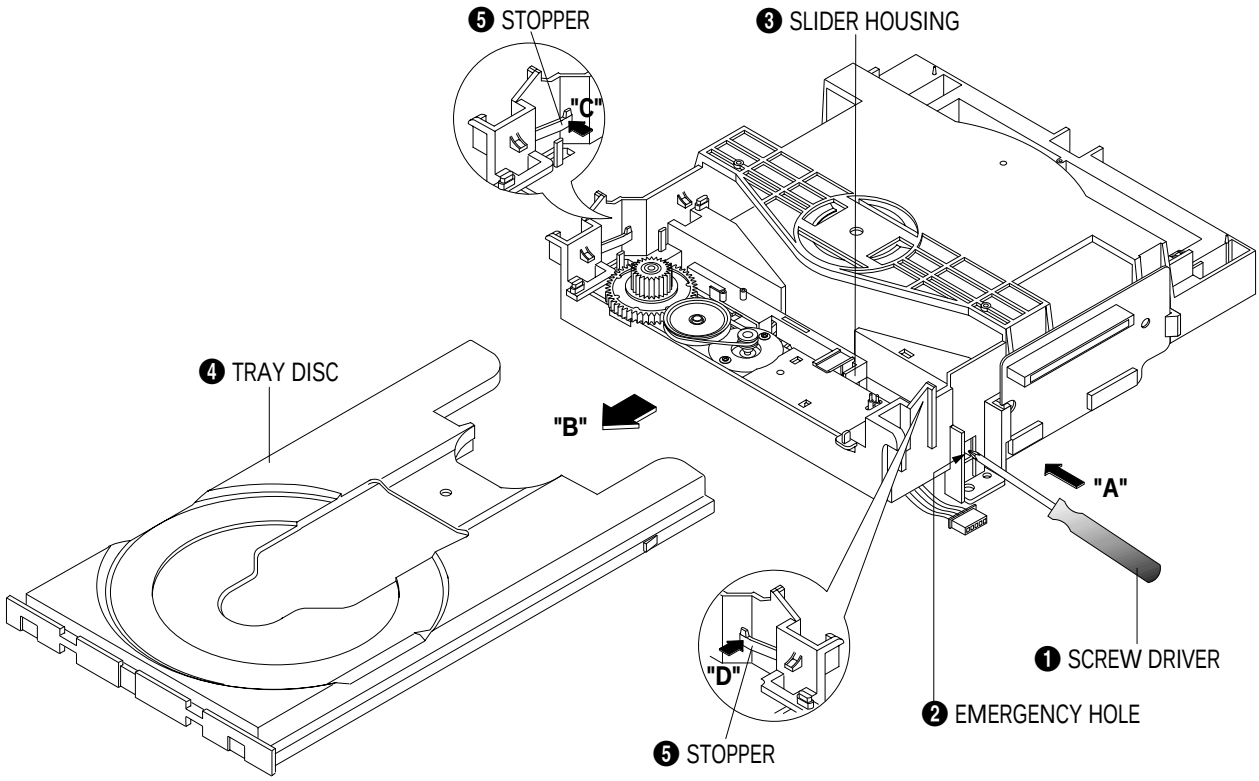

Fig. 3-2-1 Tray Disc Removal

3-2-2 Assy P/U Deck Removal

1) Disconnect DCN2 ❶, DCN3 ❷.
2) Lift down the Assy P/U Deck ❸ while simultaneously pushing 2 Hooks ❹, ❺ in the direction of arrow "A", "B".

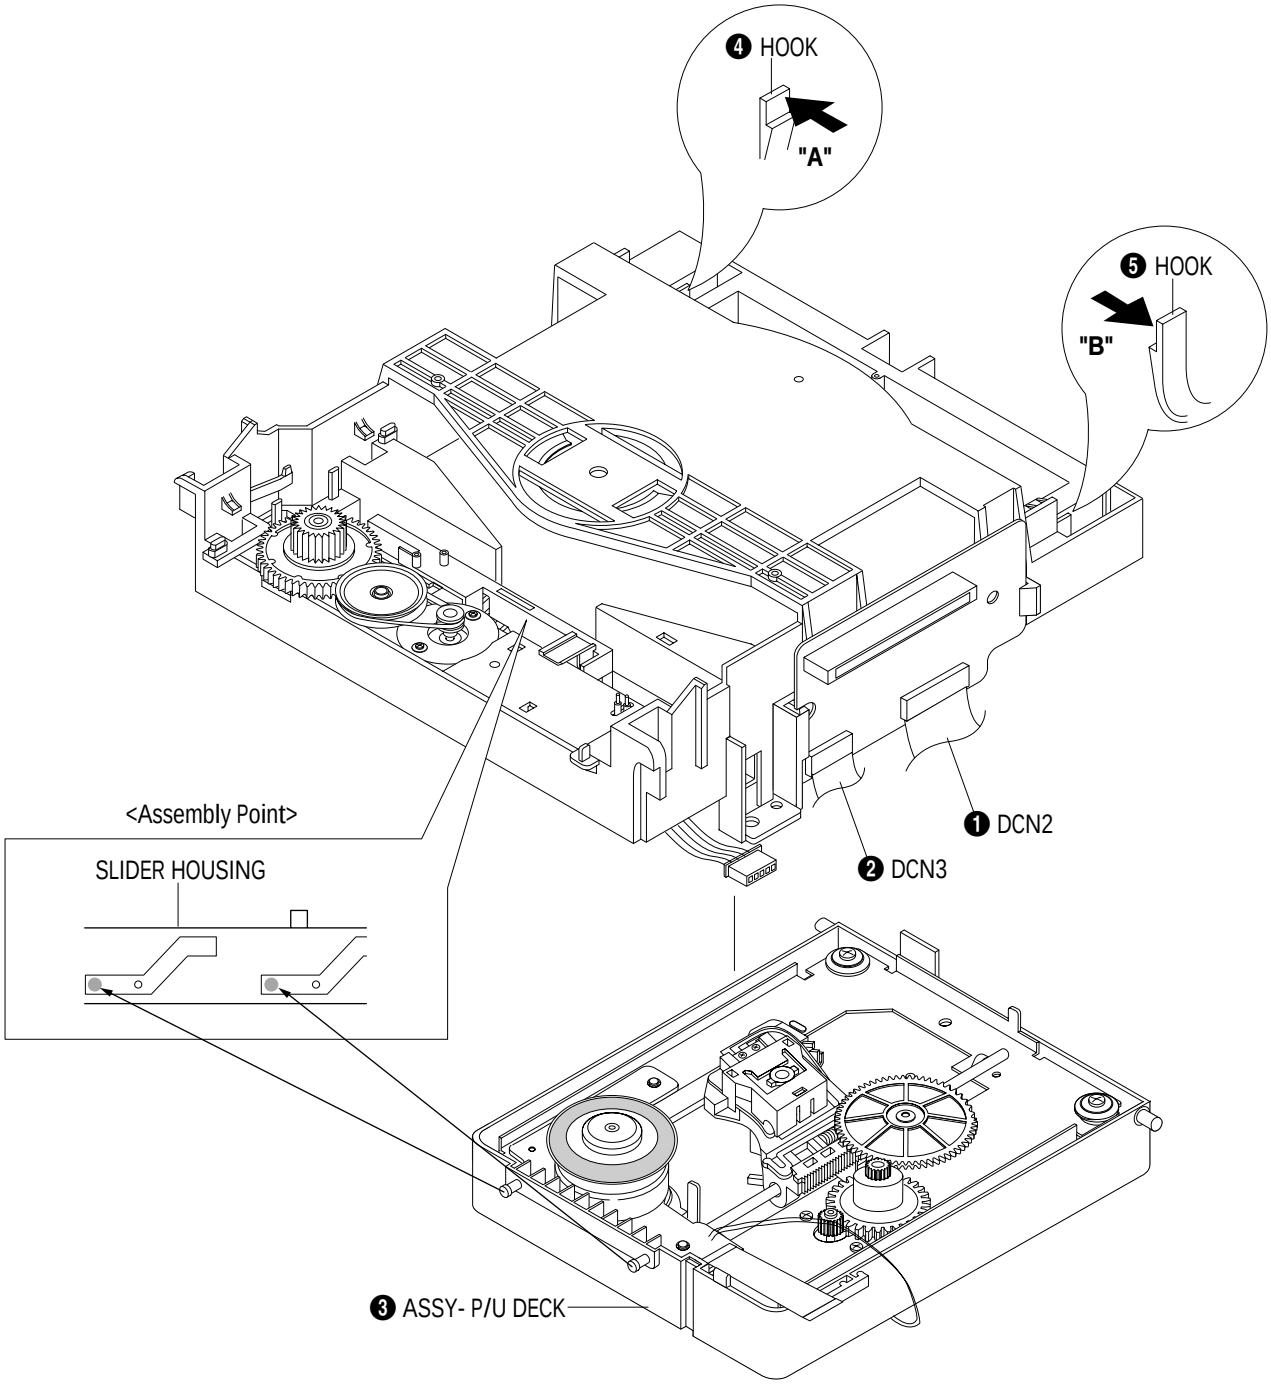

Fig. 3-2-2 Assy P/U Deck Removal

3-2-3 Housing Ass'y Removal

1) Remove Belt ❶.
2) Push the Hook ❷ in the direction arrow "A" and lift up Pulley Gear ❸.
3) Push the Slider Housing ❺ in the direction arrow "B" and lift up the Gear Tray ❹.
4) Lift up the Slider Housing ❺.
5) Remove the soldering ❻ of 2 points (Red, Black).
6) Remove 2 Screws ❼ and lift down the Motor Load Assy ❽.
7) Push the 3 Hooks ❾ bottom side in the direction arrow "C" and lift up the Housing PCB ❿.
8) Push the Hooks ⓫ and remove Deck PCB ⓬.

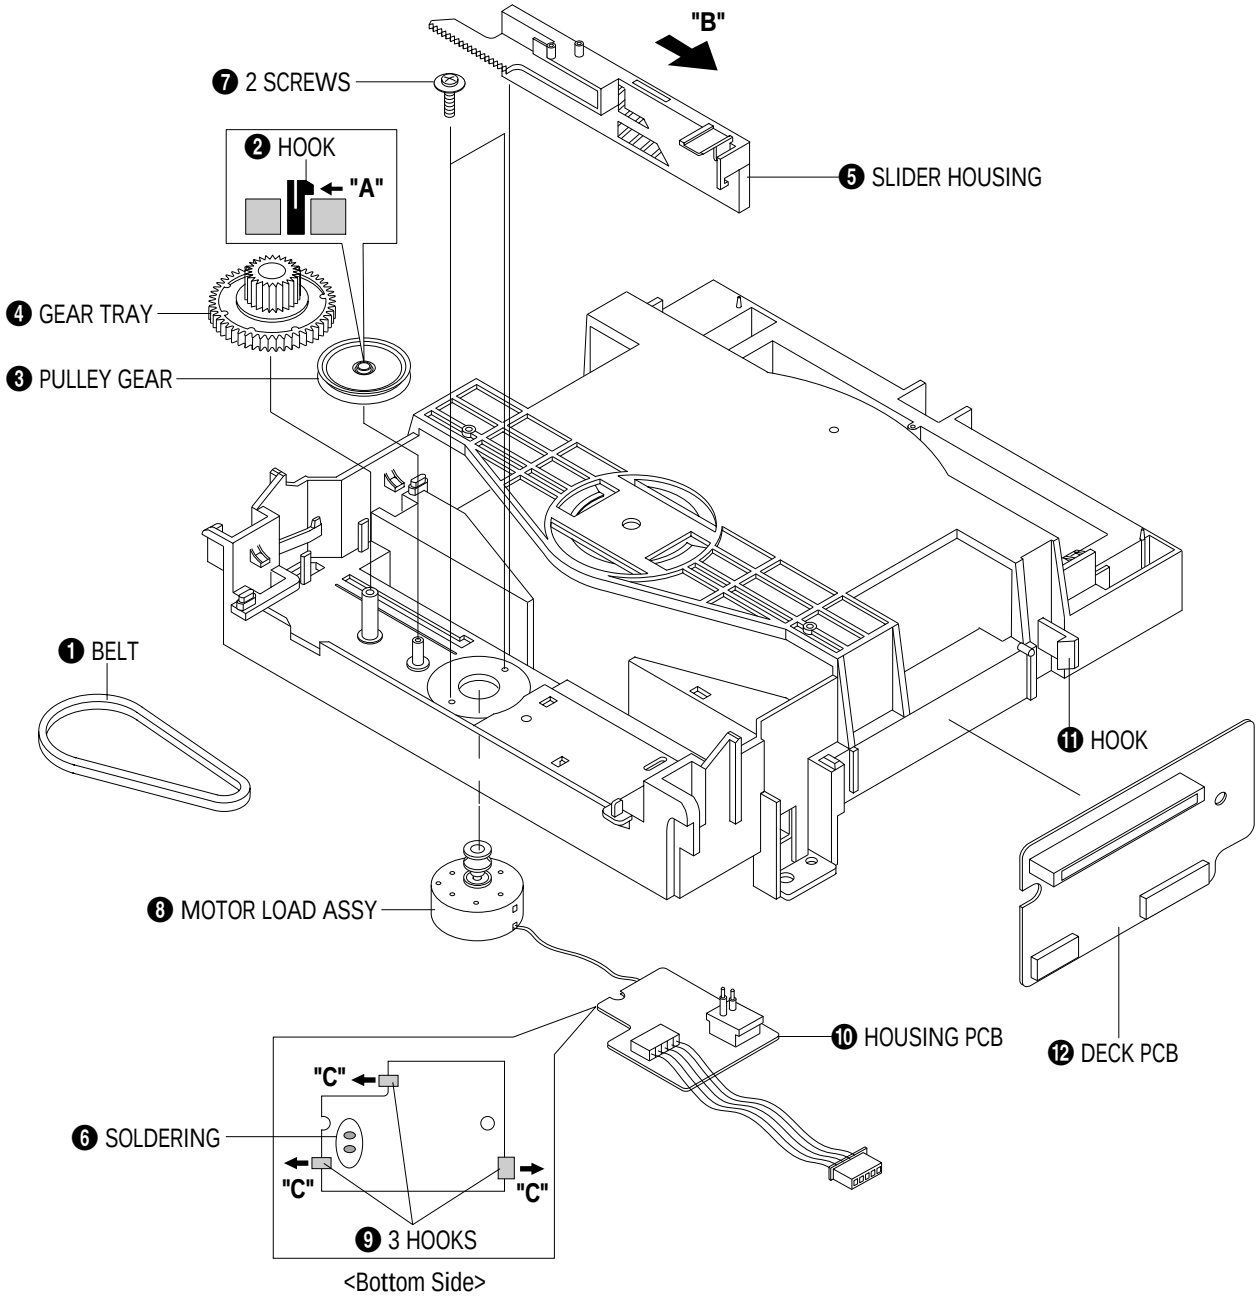

Fig. 3-2-3 Housing Ass'y Removal

3-2-4 Sub Chassis Removal

1) Remove the Soldering of Motor Feed (+, - wire) ❶.
2) Remove the 4 Screws ❷.
3) Lift up the Ass'y Brkt Deck ❸.

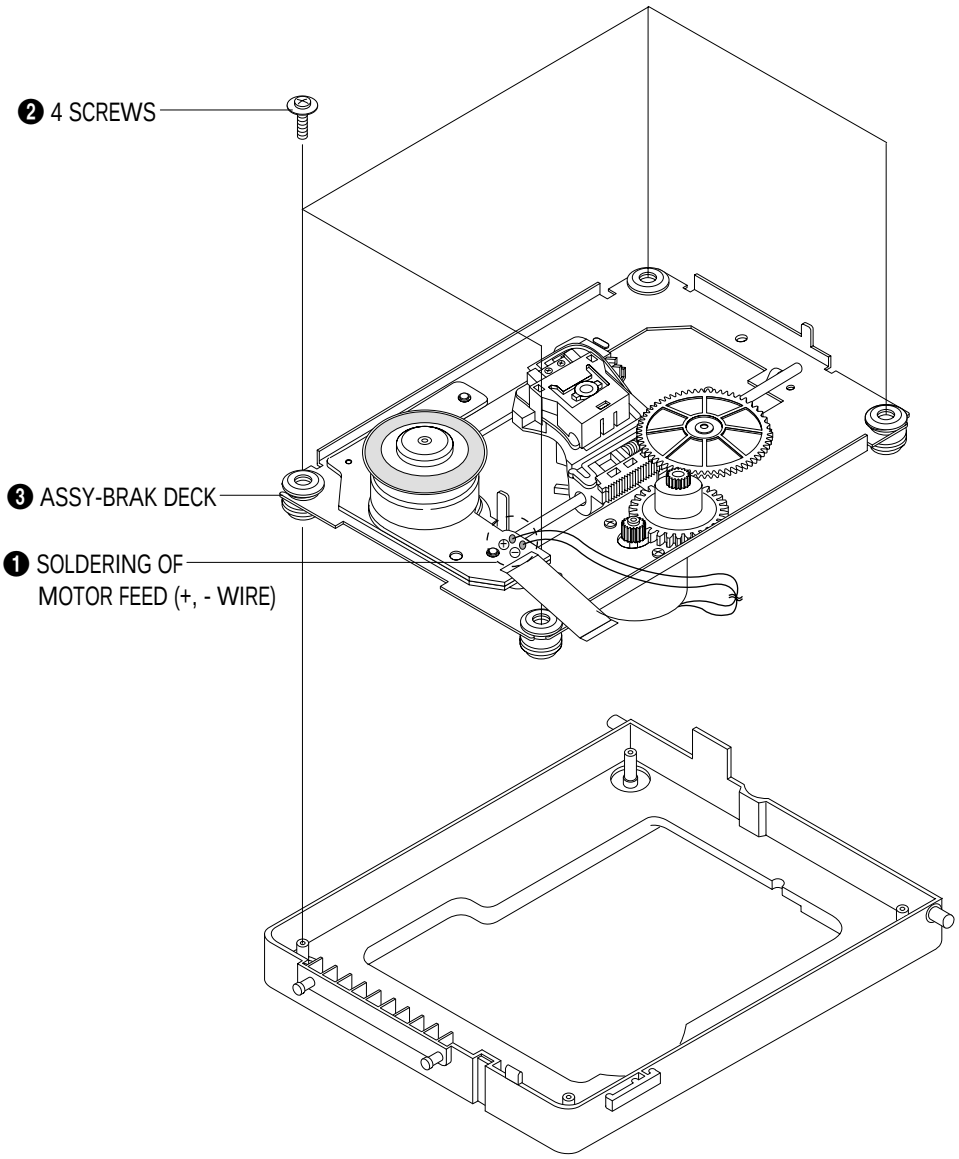

Fig. 3-2-4 Sub Chassis Removal

3-2-5 Ass'y Brkt Deck Removal

1) Remove Washer ❶.
2) Remove Gear Feed B ❷ , Gear Feed A ❸.
3) Remove 2 Screws ❹.
4) Remove Shaft Pick-Up ❺ and Pick-Up Assy ❻.
5) Remove 1 Screw ❼.
6) Remove 2 Screws ❽.
7) Remove 3 Spring Spindle ❾ and Motor Spindle Ass'y ❿.

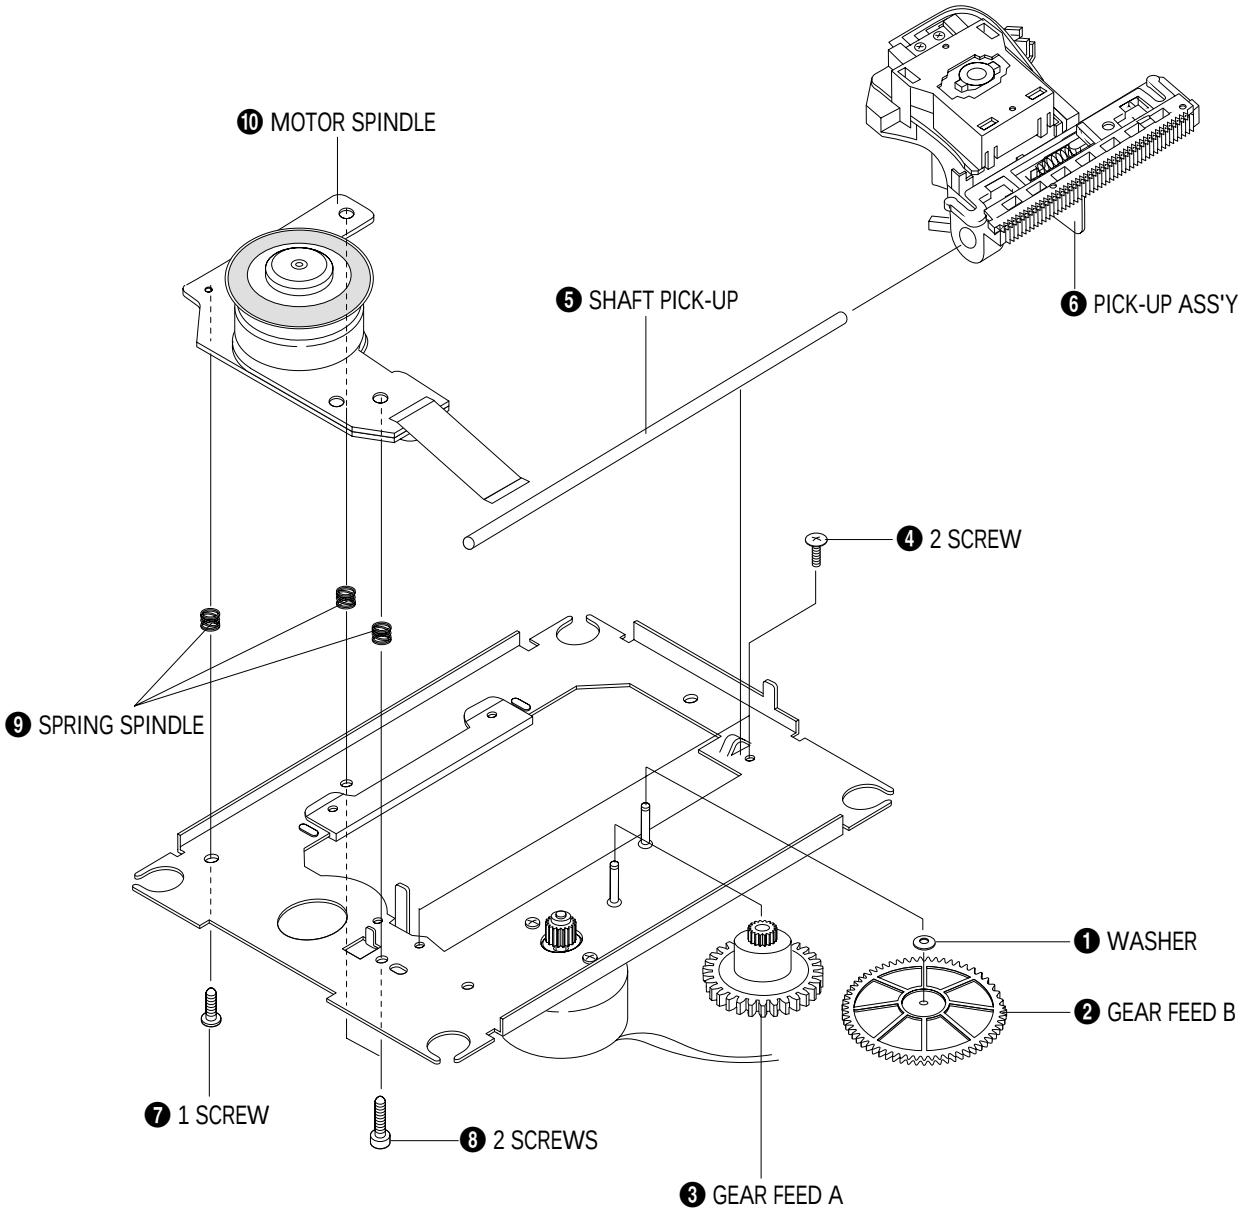

Fig. 3-2-5 Ass'y Brkt Deck Removal